


## What You Will Need

- Pencil
- Measuring tape
- Adhesive
- Spirit level
- Filler
- Caulk
- Sandpaper
- Wood primer
- Paint

You will have a collection of strips of up to three different lengths.

If your wall width is larger than 1500mm, you will have received your top and bottom A strips in multiple pieces to make up the total length required. These will be equal sizes so can be joined in the middle.


Each will be labelled WP-A, WP-B and WP-C as shown in the example label.

Wall Panelling MR MDF	Date
Order number / Customer name	WP-A1
Delivery Service	
	

A - Horizontal wood strips  
B - Vertical wood strips  
C - Divider wood strips

\* The layout to the right is for illustration purposes only, therefore:

- You may have more or fewer rows/columns than the illustration.
- If you have not opted for multiple rows you will not have any C panels.

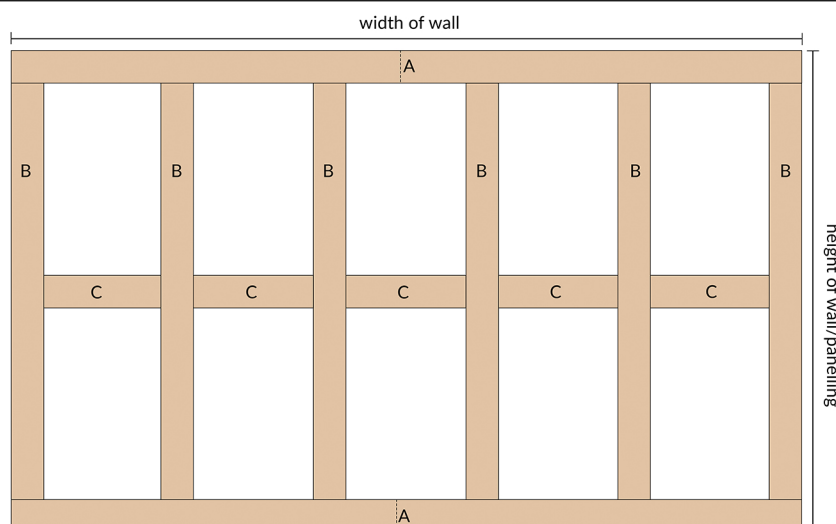

## Steps to installing your MDF Wall Panelling Kit

**Step 1:** Prepare your space by ensuring the wall is smooth. Lie out your MDF strips on the floor and group them by size (A, B and C).



**Step 2:** Mark your MDF strip positions on the wall with a pencil. You can use the measurements provided in the 'Technical View' of our online visualiser. If you have C strips, they can serve as a ruler for accurate spacing.

**Step 3:** Using a spirit level, apply a snaking line of adhesive to the A strip(s) for the base and adhere horizontally along the bottom of the wall. Next, adhere the B strips to the wall vertically. If you have C strips, then add these. You can then apply your top A strip(s).

**Step 4:** If you have opted to add beading to your panelling, please now look at the Beading instructions page before coming back to this page for step 5.

**Step 5:** Once everything is dry, use wall filler to fill any gaps between the strips. If you've measured well, the gaps should be small.

**Step 6:** Caulk around all edges of the MDF wall panels making sure to smooth evenly with a clean slightly wet finger or application tool. Once this is done, wait until dry.

**Step 7:** Prep the panelling for painting by sanding the joins which you've filled with filler. This helps the paint adhere and makes the join seamless and flat.

**Step 8:** Apply the wood primer evenly and wait to dry. You can skip this step if you chose for us to apply the priming for you.

**Step 9:** Paint the panels and wall with your chosen colour. Finally, you're free to tidy up and furnish your newly decorated room!