

These steps are based on applying your slatted panelling to the wall using adhesive. If you decide to nail or screw your slatted panelling into a plasterboard wall, make sure to use a stud detector (not supplied) to find the support framework in your wall to nail your panelling into for extra security.


What you will need:

- Slatted Panel Boards
- Spirit level
- Caulking gun
- Adhesive
- Primer (for paintable)
- Paint (optional)

Step 1: Prepare your space by ensuring the wall you are going to put on your slatted panelling is smooth and clean.

Step 2: Arrange your slatted panelling on the floor to check you know which panels are going where. If you have decided to do a full wall of panelling, your two end slats may be slightly thinner or wider than the rest to ensure a seamless fit.

If there are two end panels which are thinner or thicker than the rest of the strips, then these are the left and right ends.

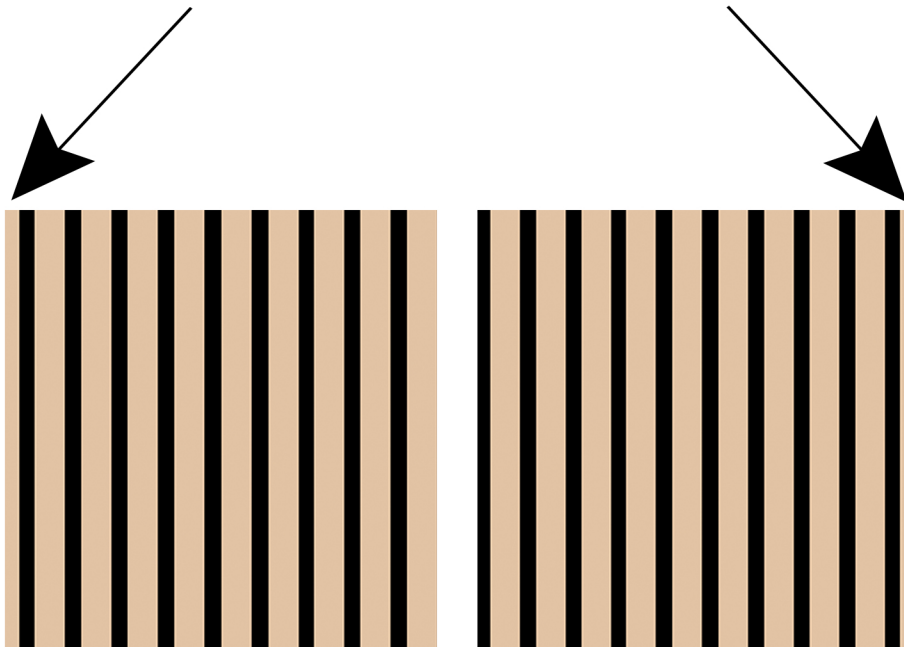

Step 3: With a caulking gun, apply a snaking line of adhesive to the back of the panel which will be installed on the left and then adhere it to the wall. Make sure to use a spirit level to make sure that it is straight.

Step 4: Continue to apply the remaining panels to the wall by repeating step 3. Start from the left and move towards the right until all panels are attached. If your order includes multiple slatted boards, remember that the left side of each board should always have a groove.

Step 5: Wait for your slatted panelling to dry onto the wall. If you have opted for moisture resistant paintable slatted panelling, apply primer and wait for this to dry before then painting your panelling in your desired colour.

Enjoy your panelling!